

ABS CONNECTOR LOCATIONS .....	17-5	CYLINDER COMPRESSION TEST .....	9-6
ABS INDICATOR CIRCUIT TROUBLESHOOTING .....	17-22	CYLINDER HEAD ASSEMBLY .....	9-21
ABS MODULATOR .....	17-27	CYLINDER HEAD COVER ASSEMBLY .....	9-30
ABS PROBLEM CODE INDEX .....	17-11	CYLINDER HEAD COVER DISASSEMBLY .....	9-7
ABS SYSTEM DIAGRAM .....	17-3	CYLINDER HEAD COVER INSTALLATION .....	9-31
ABS SYSTEM LOCATION .....	17-2	CYLINDER HEAD COVER REMOVAL .....	9-6
ABS TROUBLESHOOTING .....	17-12	CYLINDER HEAD DISASSEMBLY .....	9-13
ABS TROUBLESHOOTING INFORMATION .....	17-7	CYLINDER HEAD INSPECTION .....	9-15
AIR CLEANER .....	4-7	CYLINDER HEAD INSTALLATION .....	9-23
AIR CLEANER HOUSING .....	6-60	CYLINDER HEAD REMOVAL .....	9-12
ALTERNATOR CHARGING COIL .....	18-8	CYLINDER HEAD/VALVES SPECIFICATIONS .....	1-8
ALTERNATOR COVER .....	11-4	DIAGNOSTIC CODE INDICATION .....	22-7
BALANCER .....	13-28	DIODE .....	20-15
BANK ANGLE SENSOR .....	6-79	DRIVE CHAIN .....	4-21
BATTERY .....	18-6	DRIVE CHAIN SLIDER .....	4-25
BATTERY/CHARGING SYSTEM		DTC INDEX .....	6-16
SPECIFICATIONS .....	1-11	DTC TROUBLESHOOTING .....	6-17
BRAKE FLUID .....	4-25	ECT SENSOR .....	6-79
BRAKE FLUID REPLACEMENT/		ELECTRIC STARTER SPECIFICATIONS .....	1-11
AIR BLEEDING (CBF1000) .....	16-13	EMISSION CONTROL SYSTEMS .....	1-42
BRAKE FLUID REPLACEMENT/		ENGINE & FRAME TORQUE VALUES .....	1-13
AIR BLEEDING (CBF1000A) .....	16-7	ENGINE CONTROL MODULE (ECM)	
BRAKE LIGHT SWITCH		FUEL SYSTEM (PGM-FI) .....	6-82
LIGHTS/METERS/SWITCHES .....	21-23	IMMOBILIZER SYSTEM (HISS) .....	22-13
MAINTENANCE .....	4-28	ENGINE DOES NOT START OR IS HARD	
BRAKE PAD WEAR .....	4-26	TO START .....	24-2
BRAKE PAD/DISC .....	16-15	ENGINE IDLE SPEED .....	6-76
BRAKE SYSTEM .....	4-27	ENGINE INSTALLATION .....	8-8
CABLE & HARNESS ROUTING .....	1-23	ENGINE LACKS POWER .....	24-3
CAMSHAFT INSTALLATION .....	9-25	ENGINE OIL/OIL FILTER .....	4-16
CAMSHAFT POSITION DETECTION WITH		ENGINE REMOVAL .....	8-4
MAP SENSOR .....	2-4	ENGINE STOP RELAY .....	6-81
CAMSHAFT REMOVAL .....	9-8	EXHAUST PIPE .....	3-13
CHARGING SYSTEM INSPECTION .....	18-7	FAN CONTROL RELAY .....	7-21
CKP SENSOR .....	19-7	FLYWHEEL .....	11-7
CLUTCH .....	10-17	FORK .....	14-19
CLUTCH FLUID .....	4-29	FRONT BRAKE CALIPER (CBF1000) .....	16-35
CLUTCH FLUID DRAINING .....	10-6	FRONT BRAKE CALIPER (CBF1000A) .....	16-31
CLUTCH FLUID FILLING/BLEEDING .....	10-6	FRONT CENTER COWL .....	3-7
CLUTCH FLUID REPLACEMENT/AIR BLEEDING .....	10-6	FRONT COWLS .....	3-6
CLUTCH MASTER CYLINDER .....	10-8	FRONT FENDER .....	3-9
CLUTCH SLAVE CYLINDER .....	10-13	FRONT MASTER CYLINDER .....	16-20
CLUTCH SWITCH .....	21-23	FRONT WHEEL .....	14-13
CLUTCH SYSTEM .....	4-28	FRONT WHEEL/SUSPENSION/STEERING	
CLUTCH/STARTER CLUTCH SPECIFICATIONS .....	1-8	SPECIFICATIONS .....	1-10
COMBINATION METER .....	21-11	FUEL CUT-OFF RELAY .....	6-57
COMPONENT LOCATION		FUEL LEVEL SENSOR .....	21-20
ALTERNATOR .....	11-2	FUEL LINE .....	4-5
CLUTCH/STARTER CLUTCH/		FUEL LINE INSPECTION .....	6-51
GEARSHIFT LINKAGE .....	10-2	FUEL PUMP .....	6-55
CRANKCASE/CRANKSHAFT/BALANCER/		FUEL SYSTEM (PGM-FI) SPECIFICATIONS .....	1-7
PISTON/CYLINDER .....	13-2	FUEL TANK .....	6-57
CYLINDER HEAD/VALVES .....	9-2	GEARSHIFT SPINDLE .....	12-7
ENGINE REMOVAL/INSTALLATION .....	8-2	GENERAL SPECIFICATIONS .....	1-5
FUEL SYSTEM (PGM-FI) .....	6-2	HANDLEBAR .....	14-6
TRANSMISSION/GEARSHIFT LINKAGE .....	12-2	HANDLEBAR SWITCHES .....	21-21
COOLANT REPLACEMENT .....	7-6	HEADLIGHT .....	21-5
COOLANT TEMPERATURE INDICATOR/		HEADLIGHT AIM .....	4-28
ECT SENSOR .....	21-16	HEADLIGHT RELAY .....	21-27
COOLING SYSTEM .....	4-19	HORN .....	21-26
COOLING SYSTEM SPECIFICATIONS .....	1-7	HYDRAULIC BRAKE SPECIFICATIONS .....	1-11
CRANKCASE ASSEMBLY .....	13-22	IACV .....	6-76
CRANKCASE BEARING REPLACEMENT .....	13-21	IACV (Idle Air Control Valve) .....	2-2
CRANKCASE BREATHER .....	4-7	IAT SENSOR .....	6-78
CRANKCASE SEPARATION .....	13-5	IGNITION SWITCH .....	21-20
CRANKCASE/CRANKSHAFT/BALANCER/		IGNITION SYSTEM INSPECTION .....	19-5
PISTON/CYLINDER SPECIFICATIONS .....	1-9	IGNITION SYSTEM SPECIFICATIONS .....	1-11
CRANKPIN BEARING .....	13-12	IGNITION TIMING .....	19-8
CRANKSHAFT .....	13-7	IMMOBILIZER INDICATOR .....	22-12

# INDEX

IMMOBILIZER RECEIVER.....	22-14	ENGINE REMOVAL/INSTALLATION.....	8-3
INTAKE AIR DUCT .....	6-86	FRAME/BODY PANELS/EXHAUST SYSTEM .....	3-2
KEY REGISTRATION PROCEDURES .....	22-4	FRONT WHEEL/SUSPENSION/STEERING .....	14-3
LICENSE LIGHT .....	21-10	FUEL SYSTEM (PGM-FI).....	6-3
LIGHTS/METERS/SWITCHES SPECIFICATIONS.....	1-12	HYDRAULIC BRAKE.....	16-4
LUBRICATION & SEAL POINTS .....	1-20	IGNITION SYSTEM .....	19-3
LUBRICATION SYSTEM DIAGRAM.....	5-2	IMMOBILIZER SYSTEM (HISS).....	22-3
LUBRICATION SYSTEM SPECIFICATIONS.....	1-7	LIGHTS/METERS/SWITCHES .....	21-3
MAIN JOURNAL BEARING .....	13-9	LUBRICATION SYSTEM .....	5-3
MAIN STAND (CBF1000A) .....	3-15	MAINTENANCE .....	4-2
MAINTENANCE SCHEDULE .....	4-4	REAR WHEEL/SUSPENSION.....	15-3
MAP SENSOR .....	6-78	SERVICE RULES .....	1-2
METER PANEL .....	3-5	SHOCK ABSORBER.....	15-13
MIL CIRCUIT TROUBLESHOOTING.....	6-50	SIDE STAND	
MIL TROUBLESHOOTING .....	6-35	FRAME/BODY PANELS/EXHAUST SYSTEM .....	3-16
MODEL IDENTIFICATION.....	1-3	MAINTENANCE .....	4-30
MUFFLER/EXHAUST PIPE.....	3-12	SIDE STAND SWITCH .....	21-24
NEUTRAL SWITCH .....	21-24	SPARK PLUG .....	4-8
NUTS, BOLTS, FASTENERS .....	4-31	SPEEDOMETER/	
O2 SENSOR.....	6-86	VEHICLE SPEED SENSOR (VSS).....	21-14
OIL COOLER .....	5-12	STANDARD TORQUE VALUES .....	1-13
OIL PRESSURE INDICATOR/EOP SWITCH.....	21-18	STARTER CLUTCH .....	10-28
OIL PRESSURE INSPECTION .....	5-5	STARTER MOTOR .....	20-6
OIL PUMP .....	5-8	STARTER RELAY SWITCH .....	20-13
OIL STRAINER/PRESSURE RELIEF VALVE .....	5-6	STATOR .....	11-6
PGM-FI CONNECTOR LOCATIONS .....	6-8	STEERING HEAD BEARINGS .....	4-32
PGM-FI SYMPTOM TROUBLESHOOTING .....	6-5	STEERING STEM.....	14-30
PGM-FI SYSTEM DIAGRAM.....	6-7	SUSPENSION .....	4-30
PGM-FI SYSTEM LOCATION .....	6-6	SWINGARM/SHOCK LINKAGE.....	15-15
PGM-FI TROUBLESHOOTING INFORMATION .....	6-11	SYSTEM COMPONENTS	
PISTON/CYLINDER .....	13-15	FRONT WHEEL/SUSPENSION/STEERING .....	14-2
POOR HANDLING .....	24-6	HYDRAULIC BRAKE.....	16-2
POOR PERFORMANCE AT HIGH SPEED.....	24-6	REAR WHEEL/SUSPENSION.....	15-2
POOR PERFORMANCE AT LOW AND		SYSTEM DIAGRAM	
IDLE SPEED .....	24-5	BATTERY/CHARGING SYSTEM.....	18-2
POSITION LIGHT.....	21-7	ELECTRIC STARTER .....	20-2
PRIMARY INJECTOR .....	6-73	IGNITION SYSTEM .....	19-2
PROPORTIONAL CONTROL VALVE (PCV).....	17-29	IMMOBILIZER SYSTEM (HISS).....	22-2
RADIATOR.....	7-10	SYSTEM FLOW PATTERN .....	7-2
RADIATOR COOLANT .....	4-19	SYSTEM LOCATION	
RADIATOR RESERVE TANK.....	7-20	LIGHTS/METERS/SWITCHES .....	21-2
REAR BRAKE CALIPER (CBF1000).....	16-43	SYSTEM TESTING	
REAR BRAKE CALIPER (CBF1000A) .....	16-39	COOLING SYSTEM.....	7-5
REAR COWL .....	3-8	TACHOMETER .....	21-15
REAR FENDER.....	3-10	TAIL/BRAKE LIGHT.....	21-9
REAR MASTER CYLINDER/BRAKE PEDAL .....	16-25	THERMOSTAT .....	7-8
REAR WHEEL .....	15-6	THROTTLE BODY .....	6-69
REAR WHEEL/SUSPENSION SPECIFICATIONS .....	1-10	THROTTLE OPERATION .....	4-6
REARVIEW MIRROR .....	3-6	TRANSMISSION.....	12-11
REGULATOR/RECTIFIER.....	18-8	TRANSMISSION/GEARSHIFT LINKAGE	
RIGHT CRANKCASE COVER INSTALLATION.....	10-33	SPECIFICATIONS.....	1-9
RIGHT CRANKCASE COVER REMOVAL .....	10-15	TROUBLESHOOTING	
RIGHT/LEFT SIDE COVER.....	3-4	BATTERY/CHARGING SYSTEM.....	18-5
SEAT .....	3-3	CLUTCH/GEARSHIFT LINKAGE .....	10-5
SEAT BRACKET.....	3-3	COOLING SYSTEM.....	7-4
SECONDARY AIR SUPPLY SYSTEM		CRANKCASE/CRANKSHAFT/BALANCER/	
FUEL SYSTEM (PGM-FI) .....	6-84	PISTON/CYLINDER .....	13-4
MAINTENANCE .....	4-20	CRANKCASE/TRANSMISSION .....	12-6
SERVICE INFORMATION		CYLINDER HEAD/VALVES.....	9-5
ALTERNATOR.....	11-3	ELECTRIC STARTER .....	20-4
ANTI-LOCK BRAKE SYSTEM (ABS).....	17-4	FRAME/BODY PANELS/EXHAUST SYSTEM .....	3-2
BATTERY/CHARGING SYSTEM .....	18-3	FRONT WHEEL/SUSPENSION/STEERING .....	14-5
CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE.....	10-4	HYDRAULIC BRAKE.....	16-6
COOLING SYSTEM .....	7-3	IGNITION SYSTEM .....	19-4
CRANKCASE/CRANKSHAFT/BALANCER/PISTON/CYL-		IMMOBILIZER SYSTEM (HISS).....	22-9
INDER.....	13-3	LUBRICATION SYSTEM .....	5-4
CRANKCASE/TRANSMISSION.....	12-4	REAR WHEEL/SUSPENSION.....	15-5
CYLINDER HEAD/VALVES .....	9-3	TURN SIGNAL .....	21-7
ELECTRIC STARTER.....	20-3	TURN SIGNAL RELAY.....	21-27

---

VALVE CLEARANCE .....	4-11	WHEELS/TIRES.....	4-32
VALVE GUIDE REPLACEMENT.....	9-17	WINDSCREEN .....	3-4
VALVE SEAT INSPECTION/REFACING .....	9-18	WIRING DIAGRAMS	
WATER PUMP.....	7-16	CBF1000 .....	23-4
WHEEL SPEED SENSOR .....	17-25	CBF1000A.....	23-3